

SURFACE MOUNT CAM-LOK / TEE-LOK

Tools required:

- Masonry drill with 12mm drill bit.
- Socket or ring spanner.
- Marking pen.

Fitting instructions:


1. Having decided on the location of the bollard, use **(a)** the zinc plated drainer plate as a drilling template.

Mark out and drill the five holes 12mm diameter, 65mm deep.

Clear holes of dust.

2. Assemble as shown, **(a)** drainer plate
(b) spacer shimms
(c) shoe assembly
(d) Insert masonry anchors and tighten.

Insert bollard into installed shoe and test from the bottom. (PHOTO 3).

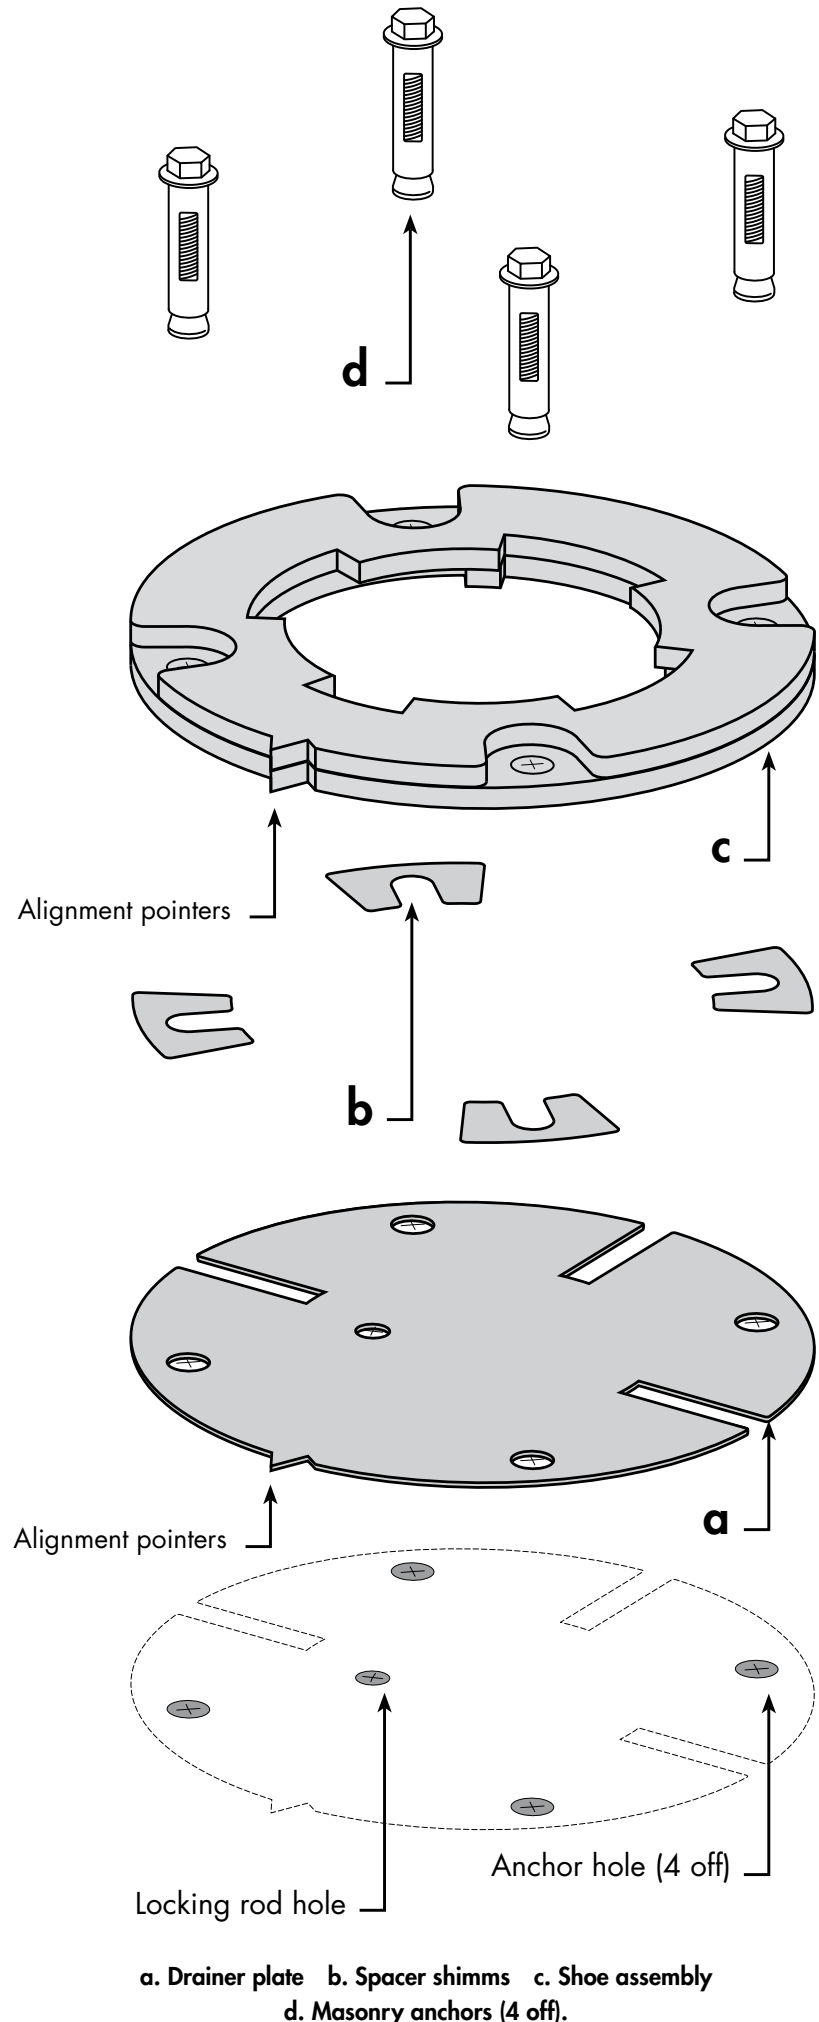

PLEASE NOTE

Components must line up as shown. Locking rod hole in drainer plate must align with drilled hole in the floor or the bollard will not lock.
Spacer shimms (b) must be fitted between the drainer plate (a) and the shoe assembly (c).